


GCC V-RAPTOR KEYMAP V1.20

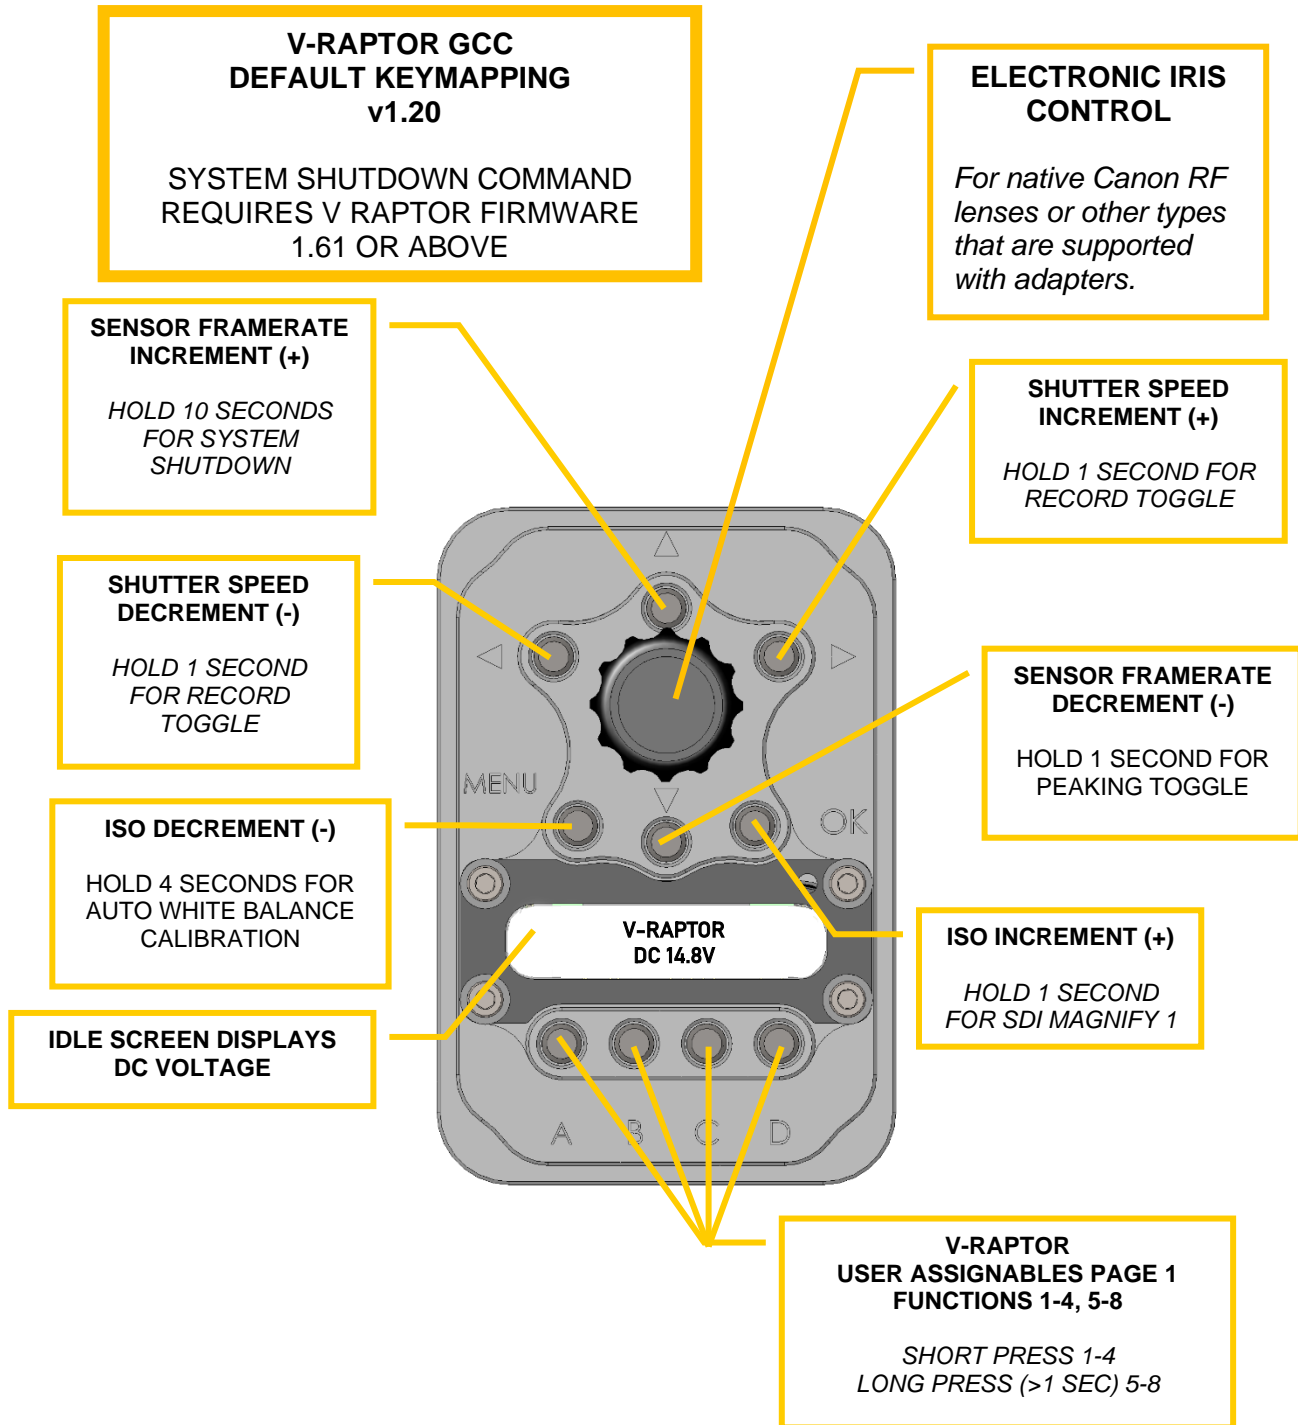

QUICK SETUP NOTES:

- SET SERIAL IP TO CAMERA DEFAULT 169.254.1.1
- SET SERIAL BAUD RATE TO 1,000,000
- ONLY PAGE 1 ASSIGNABLES WILL ACTIVATE



NOTIFICATION MODE:

*GCC WILL DISPLAY
CRITICAL CAMERA NOTIFICATIONS.*

*THE RED LED WILL FLASH AND NOTIFICATION
TITLE SHOWN ON DISPLAY UPPER TEXT ROW.*

*<-README-> WILL BE DISPLAYED ON LOWER
TEXT ROW AND MESSAGE CAN BE READ BY
PRESSING PAGE RIGHT AND LEFT BUTTONS.*

PAGE UP

*CYCLE THROUGH
AVAILABLE ACTIONS
DISPLAYED ON
LOWER TEXT ROW*

PAGE LEFT

*PRESS BUTTON TO
READ NOTIFICATION.*

*MESSAGES ARE
DISPLAYED ONE
WORD AT A TIME ON
LOWER TEXT ROW*

PAGE RIGHT

*PRESS BUTTON TO
READ NOTIFICATION.*

*MESSAGES ARE
DISPLAYED ONE
WORD AT A TIME ON
LOWER TEXT ROW*

PAGE DOWN

*CYCLE THROUGH
AVAILABLE ACTIONS
DISPLAYED ON
LOWER TEXT ROW.*

SELECT ACTION

*PRESS EITHER TO
SELECT ACTION
AFTER USING PAGE
UP / DOWN*

**UPPER TEXT ROW WILL
SHOW NOTIFICATION TITLE**

**LOWER TEXT ROW SHOWS
MESSAGE CONTENT OR
AVAILABLE ACTIONS**

